



CHEST FREEZER INSTRUCTIONS

The Chest Freezer is ideal at any event kitchen for storing frozen food and drink. It is recommended for storing food and ice.



SETTING UP:

- Connect the unit to the mains power supply.
- Allow approximately 5 hours for the freezer to get to temperature.
- Avoid positioning in direct sunlight or damp positions.
- Where there is a thermostat knob this can be used to set the required temperature.

TROUBLESHOOTING:

The warning light will come on when;

- The Lid has been left open for a while, such as when loading, re-loading or removing items from the freezer.
- Freezing large amounts of food.
- There has been a lengthy interruption to the power supply.
- The temperature is not reached its requirement.

PACKING DOWN:

When you have finished with the freezer, please follow the instructions below:

- Remove all stored contents from the freezer prior to collection (if there are baskets, please leave in place).
- Turn the unit off and unplug from the mains supply.
- Leave lid open to maximize the defrosting process.

Please note this unit is included in our 'Free Return Dirty' Service, however, we do expect that all foodstuffs have been removed and a wipe over of any spillages.

In the event of any issues please call us on: 01949 844568 or email us at

hello@inspireeventhire.com

