



SOUP KETTLE INSTRUCTIONS

This Soup Kettle is perfect for any event, it holds 10 litres, serving an average of 30-40 cups of soup, mulled wine or hot chocolate.

SAFETY:

- Place Kettle on a flat, stable surface.
- Do not immerse in water.
- Do not move or carry the Kettle when it is switched on.
- Do not operate the Kettle without water in the outer container.
- Keep the lid closed when not serving.
- Suitable for indoor use only.
- Do not touch any surface of the Kettle whilst the contents are being heated.



SETTING UP:

To start using the Soup Kettle follow the instructions below:

- Connect the Kettle to the mains power supply.
- Fill the outer container with approximately 600ml of water
- ! The inner container must NOT float, even when empty. If the container floats reduce the amount of water in the outer container.
- Fill the inner container with your chosen liquid, for example, hot soup and close the lid.
- ! The Kettle is not designed to heat food from cold.
- Set the temperature control. The temperature ranges from 1 (lowest) to 12 (highest).
- The power light will come on and the Kettle will begin to heat up.
- Reduce the temperature to maintain heat levels. To maintain temperature, it's recommended the lowest heat setting possible.
- Use a Ladle to remove the contents of the Kettle. Do not tip the Kettle to remove the contents.

PACKING DOWN:

When you have finished with the Kettle, follow the instructions below:

- To turn the Kettle off, set the temperature control to '0'.
- Turn off and un-plug Kettle from the mains supply.
- Allow to cool down and remove all food contents from the Kettle.

Please note this Kettle is included in our 'Free Return Dirty' Service, however, we do expect that all foodstuffs have been removed and a wipe over of any spillages.

In the event of any issues please call us on: 01949 844568 or email us at hello@inspireeventhire.com