



UNDERCOUNTER GLASS FRONTED FRIDGE



This Glass Fronted Double Door Fridge is ideal at any event for storing food and drinks. We would recommend that it is used for storing wine, beer, cold drinks and champagne.


SETTING UP:

- Connect the fridge to a mains power supply.
- If the unit has not been stored in an upright position, let it stand for approximately 12 hours to settle before operation.
- Avoid positioning the unit in direct sunlight or damp areas.
- Turn Cabinet light on or off as desired.

TEMPERATURE SETTING:

Temperature is set as follows:

- Press the 'Set' button. The display will flash.
- Press the 'Up or Down' arrow buttons to display the required temperature.
- Press the 'Set' button to confirm the temperature.

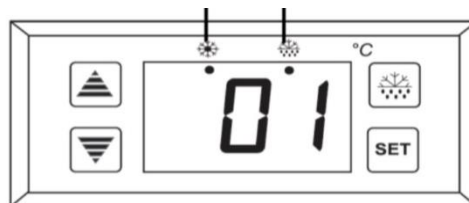

PACKING DOWN:

When you have finished with the Fridge please follow the instruction below:

- Remove all food and drink contents (leaving shelves in place)
- Turn the unit off and unplug from the mains supply.

Please note this unit is included in our 'Free Return Dirty' Service, however, we do expect that all foodstuffs have been removed and a wipe over of any spillages.

In the event of any issues please call us on: 01949 844568 or email us at hello@inspireeventhire.com

